


Akupack je určen výhradně k dataloggerům: **AR006087, AR004525, AR006092, AR006079, AR006088, AR006089, AR005306, AR006090, AR006082, AR003954, AR006091, AR006093, AR006086, AR005348**

**UPOZORNĚNÍ** - výměnu smí provádět pouze kvalifikovaný servisní technik  
 - před výměnou si podrobně přečtěte tento postup  
 - pro doplnění zde uvedených informací použijte manuálů a dalších dokumentů, které jsou k dispozici v sekci *Ke stažení* u konkrétního přístroje na [www.guilcor.com](http://www.guilcor.com)

- vypněte přístroj:
  - stiskněte dlouze dolní tlačítko a poté, co se rozsvítí řádek s položkami menu, tlačítko uvolněte
  - krátce stiskněte horní tlačítko
  - opakovaným krátkým stiskem horního tlačítka zvolte symbol **OFF**
  - zmáčknutím dolního tlačítka přístroj vypněte
- odšroubujte zadní díl přístroje, ve kterém je umístěn akumulátor (použijte šroubovák TORX T10)
- odpojte starý akupack od přístroje
- k přístroji připojte USB nabíječku a **vyčkejte**, až na displeji bude **trvale** svítit symbol plně nabitě baterie (viz obr.)
- vybalte nový akupack AR006105, zkontrolujte a případně upravte polohu těsnění v drážce
- znovu ověřte, zda na displeji svítí symbol plně nabitě baterie a **teprve poté** připojte nový akupack k přístroji - **! nedodržení tohoto kroku může vést ke zničení nového akupacku !**
- přístroj sestavte (opatrně dotáhněte šrouby)
- přístroj nechte nabít do plného stavu (symbol plně nabitě baterie musí **trvale** svítit):
  - při nabíjení musí být přístroj umístěn ve vnitřních prostorách s vlhkostí max. 85%.
  - nabíjení bude probíhat pouze při vnitřní teplotě přístroje v rozmezí 0 až 40 °C.
- zapněte přístroj

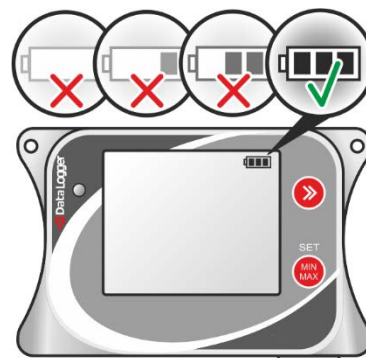

The accupack is designed exclusively for dataloggers: **AR006087, AR004525, AR006092, AR006079, AR006088, AR006089, AR005306, AR006090, AR006082, AR003954, AR006091, AR006093, AR006086, AR005348**

**WARNING** - Replacement may only be carried out by a qualified service technician  
 - Read this procedure in detail before you replace it  
 - To add any additional information provided here, use manuals and other documents available in the *Downloads* section for a particular device at [www.guilcor.com](http://www.guilcor.com)

- Turn off the device:
  - press and hold down the lower button and release the button when the menu item bar lights up
  - briefly press the upper button
  - press the upper button briefly again to select **OFF**
  - press the lower button to turn off the device
- unscrew the rear of the device where the accu is located (use the TORX T10 screwdriver)
- disconnect the old accupack from the device
- connect the USB charger to the device, and **wait until the full battery symbol will be permanently lit** (see fig.)
- unpack the new AR006105 accupack, check and, if necessary, adjust the position of the seal in the groove
- again check that the fully charged battery symbol is on the display and **then** connect the new accupack to the device - **! failure to observe this step can lead to the destruction of a new accupack !**
- assemble the device (the screws tighten gently)
- charge the unit fully (full-battery symbol must be **permanently lit**):
  - When charging, the device must be installed indoors with a maximum humidity of 85%, at an indoor temperature ranging between 0°C and +40°C.
- Turn device ON

